

 
PLAYPAL™

INCLUDES 20 8-BIT
SEGA GAMES

QUICK START GUIDE



Appearance and Key List

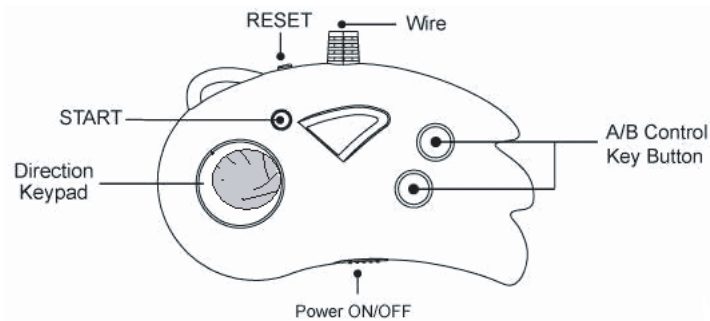

Getting started.

1. Insert 2 x AA batteries into the player.
2. Plug the AV cable of the player into the TV. (White plug into Audio-IN on your TV and the yellow plug into the Video-IN on your TV.)
3. Turn your TV on and adjust the volume to low.
4. Set your TV to the appropriate channel to receive external AV signal.

How do you play the Game?

1. Push the "On/Off" key to the "On" position to turn on the game player.
2. Toggle the joystick Up or Down key to highlight a game on that page. To move to the next or previous page toggle the joystick left or right.
3. Once the highlight is on the game you want to play, press the "START" or the "A" button.
4. Once you start your game, you may adjust the volume control on your TV set to the desired level.
5. Press the "RESET" key anytime to return to the main menu.

Trouble Shooting

<u>Problem</u>	<u>Solution</u>
No Picture on TV	<ul style="list-style-type: none"> * Connect the AV cable * Turn on the game player * Turn the TV ON. * Set the TV to the AV input channel
No game sound on TV	<ul style="list-style-type: none"> * Ensure the AV cable is connected correctly * Adjust the VOL button and increase the volume * Please ensure the TV is not on MUTE mode
Picture on TV Screen is unsteady	<ul style="list-style-type: none"> * Adjust the vertical and horizontal hold controls on your TV until the picture becomes steady
Picture is blinking or distorted	<ul style="list-style-type: none"> * Turn the game player OFF and then turn it ON again

Caution:

- * Please ensure that the game player is turned OFF before connecting the AV input into your TV.
- * Please remove the batteries out of the game player if the device will not be used for prolonged periods

The content of this document is subject to change without notice.

To learn more about PlayPal™ and PlayPal™ products visit our website at: www.playpalworld.com

Made in China
© 1543321 Ontario Inc
All Rights Reserved.

SEGA is a registered trademark of SEGA Corporation. PlayPal™ is manufactured for and distributed by 1543321 Ontario Inc. Games software © SEGA Corporation. PlayPal™ is a trademark used under license by 1543321 Ontario Inc. Copyright 2006 1543321 Ontario Inc. All rights reserved.