

Monkey Paradise™

UP TO 5
CONTINUOUS
GAME STAGE
FAST INCOME GAME



- ① Press Left/Right button in turn to climb faster.
- ② The more coconuts, the more tickets.
- ③ Pick the GOLDEN coconut to challenge the BONUS stage

W710xD611xH1760mm (Unit)

W2130xD611xH2390mm (Set with upper lid)

SEGA®

SEGA AMUSEMENTS USA, INC.
 800 ARTHUR AVENUE - ELK GROVE VILLAGE, IL 60007-5215
 TEL: (847)364-9787 FAX: (847)427-1065 TOLL FREE: (888)877-2669
www.segaarcade.com