

The Sega Sports Pad.TM

Instructions



Using the Sega Sports Pad™ couldn't be easier. Just follow these simple steps:


- Plug the Sports Pad into control port 1 if you are playing alone. Otherwise, either control port may be used.

Ball Controller

Move this for fast, precise control of your on-screen character or object.

Action Buttons

The individual game instructions will tell you which one to press to start the game, fire, jump, kick, increase speed, throw, swing...and so on.

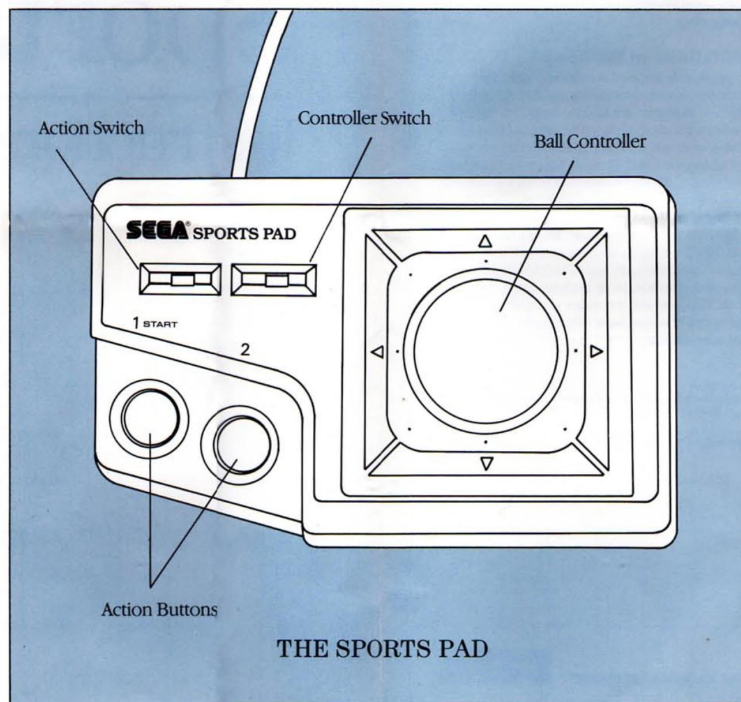

Action Switch

Switch to *four dots* for continuous action when *pressing and holding* an action button. Switch to *one dot* for one 'action' per press of the action button.

Ex: In a shooting-type game, the one-dot setting allows one shot for each press of the button; the four-dot setting causes continuous fire when holding the button down.

Controller Switch

If you are playing a game designed for use with the Sports Pad, switch to the "sports" setting. If the game was not designed for the Sports Pad, you may still use it as your controller, but you must first switch to the "control" setting (or else your on-screen character may not move). In the "control" setting the Sports Pads' range of movement and speed becomes identical to that of the regular control pad.

90-DAY LIMITED WARRANTY

To validate the following 90-day limited warranty, your warranty card and sales slip or proof of purchase should be completed and returned to Sega within 10 days after date of purchase.

90-Day Limited Warranty

Sega of America, Inc. warrants to the original consumer purchaser that the Sega Sports Pad shall be free from defects in material and workmanship for a period of 90 days from the date of purchase. If defect covered by this warranty occurs during this 90-day warranty period, Sega will repair or replace the defective system or component part,* at its option, free of charge.

This warranty does not apply if the defects have been caused by negligence, accident, unreasonable use, modification, tampering, or any other causes not related to defective materials or workmanship. Additionally, this warranty shall not be valid if the serial number of the Sega Sports Pad has been altered, defaced, or removed in any way.

To receive fast, reliable warranty service, call the Sega Customer Service Department at the following numbers:

Outside California State (800) USA-SEGA

Inside California State (415) 742-9300

Our Customer Service Department is in operation from 9:00 a.m. to 5:00 p.m. (Pacific Time), Monday through Friday. *Do not return your Sega Sports Pad to your retail seller.*

If the Sega technician is unable to solve the problem by phone, we will provide you with instructions on returning your defective system to us. The cost of returning the system to Sega's service center shall be paid by the purchaser.

Sega's service center is located at the following address:

SEGA OF AMERICA, INC.

573 Forbes Blvd.

South San Francisco, CA 94080

Repairs After Expiration of Warranty

If your Sega Sports Pad requires repairs after termination of the 90-day warranty period, you may contact the Sega Customer Service Department at the number listed above. If the technician is unable to solve the problem by phone, he will advise you of the estimated cost of repair. If you elect to have the repair done, you will need to return the defective merchandise, freight prepaid, to Sega's service center with an enclosed check or money order payable to Sega of America, Inc. for the amount of the cost estimate provided to you by the technician. If, after inspection, it is determined that your merchandise cannot be repaired, it will be returned to you and your payment will be refunded.

Limitations on Warranty

Any applicable implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited to ninety days from the date of purchase and are subject to the conditions set forth herein. In no event shall Sega of America, Inc. be liable for consequential or incidental damages resulting from the breach of any express or implied warranties.

The provisions of this warranty are valid in the United States only. Some states do not allow limitations on how long an implied warranty lasts or exclusion of consequential or incidental damages, so the above limitation or exclusion may not apply to you. This warranty provides you with specific legal rights. You may have other rights which vary from state to state.

*Component covered under this warranty is the Sega Sports Pad (3040).

Sega Sports Pad is a trademark of SEGA OF AMERICA, INC.

Now, there are no limits®

SEGA®