



DREAM > MASTER™

ADVANCED CONTROLLER FOR SEGA DREAMCAST*



INSTRUCTIONS

FEATURES

- Analog and Digital controls
- Dual expansion slots for “VMU” and “Jump Pack” pack compatibility
- Independent Turbo
- Slow motion
- Extra <C> and <Z> buttons for future compatibility
- Compatible with all Dreamcast games displaying the “Standard Controller” Icon

INSTRUCTIONS

Thank you for purchasing the NYKO Dream Master controller for Sega Dreamcast. Please review the following instructions for the correct operation of your new controller.

USING THE EXPANSION SOCKETS

Your Dream Master controller provides two extension ports that can be used for memory pack and force feedback adaptor expansion. These ports may also be used with future accessories that may become available.

NOTES:

- Expansion Socket 1 (the upper slot) is for the insertion of memory packs (such as the NYKO Jumbo MemoryPak x2 or the Sega VMU).
- Expansion Socket 2 (the bottom slot) is for the insertion of force feedback adaptors (such as the NYKO ThunderPak or the Sega Jump Pack).
- All NYKO and Sega* memory packs and force feedback adaptors should fit smoothly into the expansion sockets. Never force anything into these ports, since doing so will cause damage to your controller.
- Make sure your game is compatible with the expansion adaptor you want to use.

CONTROLLER FUNCTIONS

- The function of controller buttons changes according to the demands of the software. Refer to your game manual for button assignments and functions.

USING THE TURBO FUNCTION

- To activate Turbo on any button, press and hold the <SET> button then hit the desired key. Repeat process with the <CLEAR> key to deactivate.

USING THE SLOW MOTION FUNCTION

- To activate the Slow Motion function, press the <SLOW> button. Press again to deactivate.

CARE AND MAINTENANCE

- Do not expose this controller to extreme conditions, including excess heat and humidity.
- Never pull the controller out of its socket by the cord or place excessive force on the controller cable.
- Never use chemicals to clean the controller. If cleaning is necessary use a slightly damp cloth to clean the effected area.
- Never insert expansion socket adaptors with excessive force. This may damage both the adaptor and the controller.
- Never allow any type of liquids or small objects to enter the controller.

Nyko Product Limited Warranty

This NYKO product is warranted to the original purchaser for the normal intended use for a period of ninety (90) days from the date of purchase. If a defect covered under this warranty occurs, NYKO will replace or repair the product or its defective parts, at its option, at no charge. Warranty does not apply to defects resulting from modification or misuse of this product. The product can be returned to the place of purchase accompanied with proof of purchase or shipped to: NYKO Technologies, Inc. P.O. Box 46697, Los Angeles, CA 90046 with freight charges prepaid. Please allow 3-4 weeks for processing.