



# handheld electronic 20 **games** one Quick Start Guide

## Appearance and Key List

The image below shows the location of the connectors and keys, the function of each key is listed also. [The following illustrations are for reference only.]




## How do you play the Game?



- 1** Push the "On/Off" key on "On" status to turn on Game Player.
- 2** Press "up" or "down" of D-Pad to select one of your favorite Game titles, then press the "A" key to select it
- 3** Press the "START" key to play the current Game selected.

## How do you switch back to Game menu quickly while playing the game?

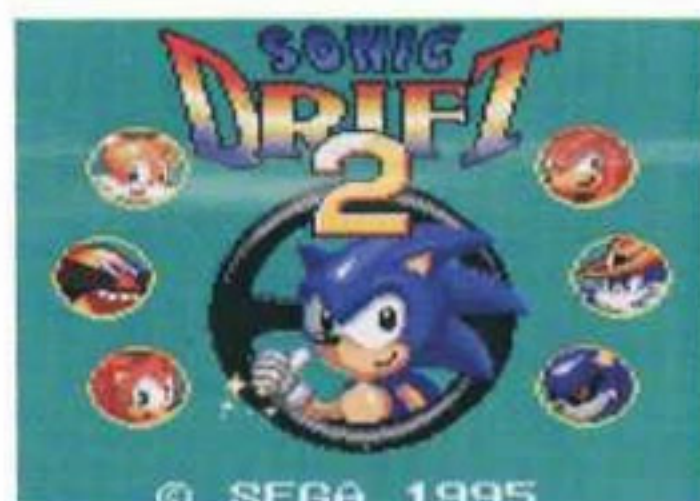

Press "RESET" key for more than 2 seconds, then release the key, the screen will be back to the top level

### How do you adjust the volume?

Press the "VOL+" or "VOL-" key to adjust the volume for optimal audio effect.

### How do you turn off the Game Player?

Push the "On/Off" key on "Off" status to turn off Game Player.

The content of this document is subject to change without notice.

**1-800-975-5621**

To learn more about Coleco and Coleco products visit our website at:  
[www.coleco.com](http://www.coleco.com)

SEGA is registered trademark of SEGA Corporation. This Coleco product is manufactured for and distributed by Coleco Holdings, LLC. Games software © SEGA Corporation. All rights reserved.

**Made in China**

© 2006 Coleco Holdings, LLC  
Minneapolis, MN All Rights Reserved.