


1) LAYOUT DIAGRAM

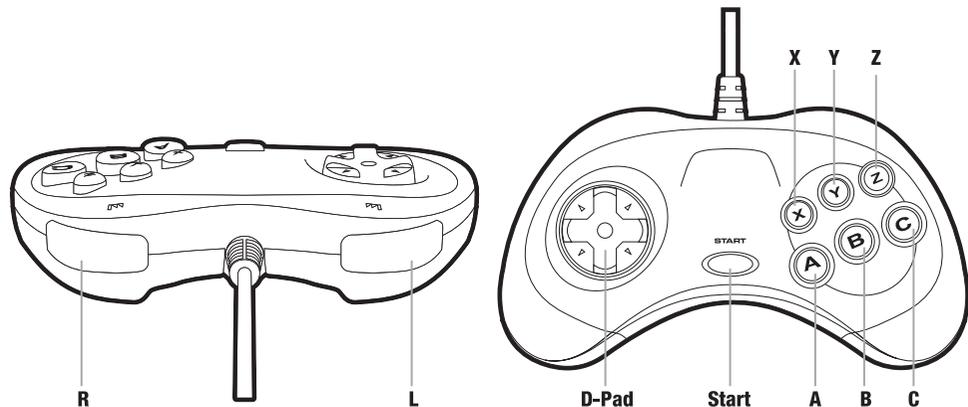

retro-bit

SEGA



SEGA SATURN

8 Button Arcade Pad with USB®

For PC, Mac®, Steam®, PS3® and Switch

INSTRUCTION MANUAL
MANUAL DE INSTRUCCIONES
GUIDE D'UTILISATION

NA

2) DEFAULT BUTTON MAPPING

Saturn	D-Input	X-Input	PS3®	Mac®	Switch
Up ↑	Y-Axis ↑	Y-Axis ↑	Y-Axis ↑	Y-	Y-Axis ↑
Right →	X-Axis →	X-Axis →	X-Axis →	X+	X-Axis →
Down ↓	Y-Axis ↓	Y-Axis ↓	Y-Axis ↓	Y+	Y-Axis ↓
Left ←	X-Axis ←	X-Axis ←	X-Axis ←	X-	X-Axis ←
A	2	A	●	3	A
B	3	B	×	2	B
X	1	X	■	4	X
Y	4	Y	▲	1	Y
C	5	RB	R2	8	ZR
Z	6	LB	L2	7	ZL
L	7	LT	L1	5	L
R	8	RT	R1	6	R
Start	10	Start	Start	10	+
Start + A	Guide	Guide		13	Home
Start + X	Select	Select	Back	9	-

Switch Macros	
Hold for 5 seconds	Mode Enabled
↑ + Start	D-Pad input
← + Start	Left Joystick
→ + Start	Right Joystick
↓ + Start	Swap A-B & X-Y



Retro-bit is a registered trademark of Kool Brands, LLC. Sega, Sega logo, Saturn, Sega Saturn and Genesis are registered trademarks of Sega Holdings Co., Ltd or its affiliates. Mac is a registered trademark of Apple Inc. Steam is a registered trademark of Valve Corporation. PS3 is a registered trademark of Sony Interactive Entertainment Inc. USB is a registered trademark of Universal Serial Bus Implementers Forum, Inc. Nintendo Switch is a registered trademark of Nintendo of America Inc. All other mentioned trademarks are either trademarks or registered trademarks of their respective owners. This product is officially licensed by Sega of America, Inc. This is a Retro-Bit product and is not endorsed, manufactured or distributed by Nintendo. © 2012 Kool Brands, LLC.

- Swap between D-Input and X-Input by holding the **Start + B** buttons for 5 seconds
- Compatible with PC, Mac®, Steam®, PS3® and Switch
- On Steam®, switching to X-Input may solve D-Pad issues (may differ between titles)

- Para USB®, intercambia la entrada D y la entrada X manteniendo pulsados los botones **Start + B** durante 5 segundos.
- Compatible con PC, Mac®, Steam®, PS3® y Switch
- En Steam®, cambiar la entrada X puede resolver los problemas con la cruceta.

- Basculer entre la configuration D et la configuration X en maintenant les touches **Start + B** pendant 5 secondes
- Compatible avec PC, Mac®, Steam®, PS3® et Switch
- Steam®: Basculer la configuration en X pourrait résoudre les problèmes de touches directionnelles (peut être différent selon le jeu)



For more information, please visit
www.retro-bit.com