 


SEGA™

Sega Saturn™ Back-Up Memory Instruction Manual

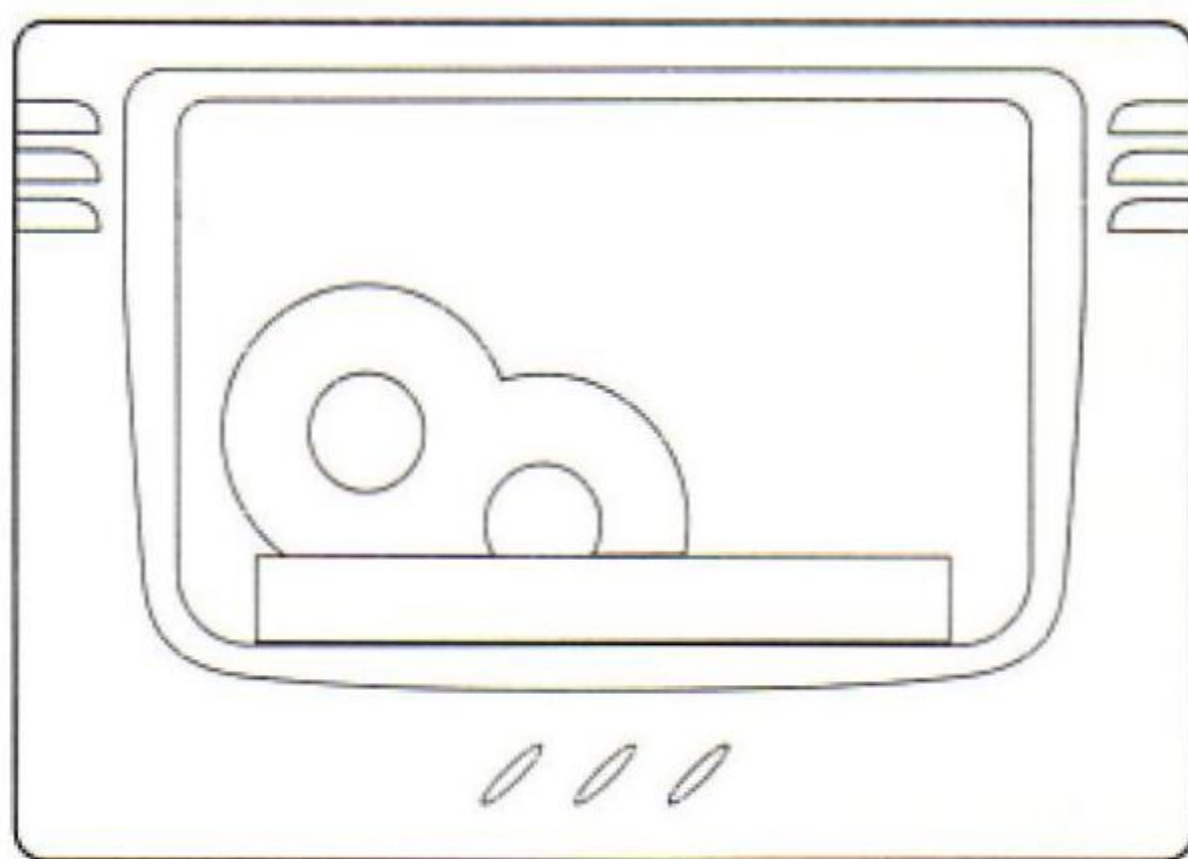

Contents

ENGLISH	3
DEUTSCH	11
FRANÇAIS	19
ESPAÑOL	27
ITALIANO	35
NEDERLANDS	43
SVENSKA	51

Please read these instructions carefully before using your Back-Up Memory.

Included in your Back-Up Memory package:

- Back-Up Memory console
- Instruction manual (this booklet)

Introduction

The Back-Up Memory is an external memory booster that fits into the Cartridge Slot of your Sega Saturn console. It increases the memory of your Sega Saturn, enabling you to save a far larger quantity of game data.

The method of saving depends on each game. For further information, consult the game's instruction manual.

Before using your Back-Up Memory, be sure to read "Initializing" on page 6.

Caution

- **Switch the power off**
The power must be off when you install or remove the Back-Up Memory. If it is not, it can damage your system.
- **Do not touch any terminals**
If you touch the terminals or they get wet, it may damage the cartridge and your system.
- **Do not use chemical cleansers**
If the Back-Up Memory is dirty, do not clean it with thinner or benzene. Use water or neutral cleanser.
- **Handle with care**
Avoid impacts, such as from dropping or stepping on the Back-Up Memory. Do not dismantle the Back-Up Memory.
- **Store away from extreme conditions**
Avoid storing the Back-Up Memory in places that are excessively hot, cold or moist or in direct sunlight.

 
Inserting the Back-Up Memory/ Accessing the System Settings Screen

1. Confirm that your Sega Saturn console and video cable are correctly connected to your television.




2. Turn the power to the Sega Saturn off.
3. Insert the Back-Up Memory into the Cartridge Slot in the Sega Saturn console.

4. Switch on the power to the Sega Saturn while holding down the Left or Right Shift Button. Following the Sega Saturn logo, the System Settings screen appears.

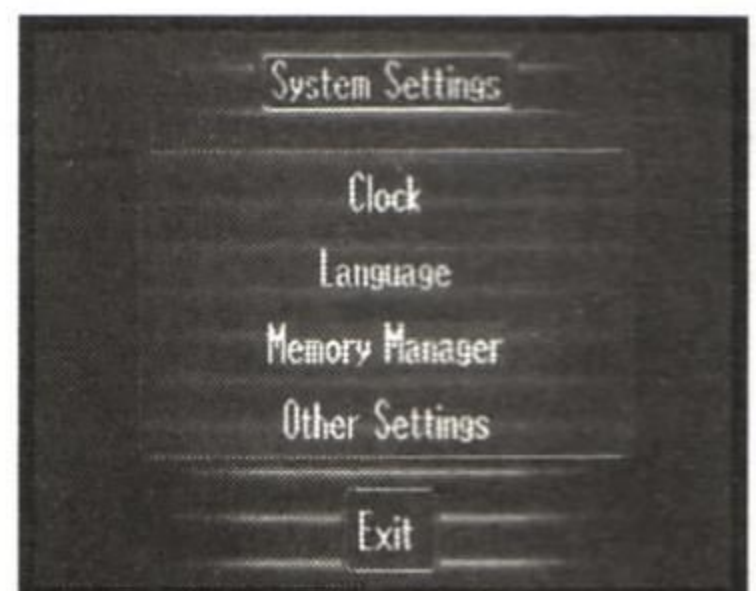


Accessing the Memory Manager Screen

 Select **Memory Manager** from the System Settings screen.

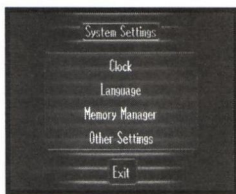


Note: To access the System Settings screen at any time when the system power is on, press the Reset button while holding down the Left or Right Shift Button. From the Audio CD Control screen of your Sega Saturn, select **System Settings**, to access the System Settings screen. (see your *Sega Saturn Instruction Manual*).

 The Memory Manager Screen

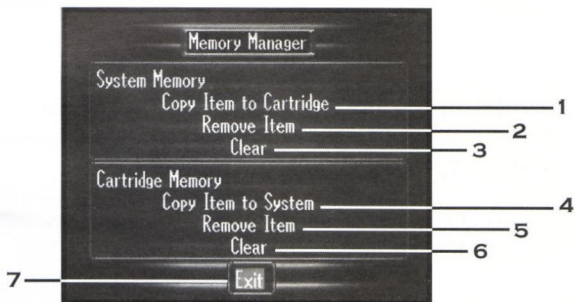

1. Copy item from Sega Saturn console internal memory to Back-Up Memory
2. Delete item from Sega Saturn console internal memory
3. Clear internal memory (initialize)
4. Copy item from Back-Up Memory to Sega Saturn console internal memory
5. Delete item from Back-Up Memory
6. Clear Back-Up Memory
7. Return to System Settings screen

 The Clear and Copy Screens


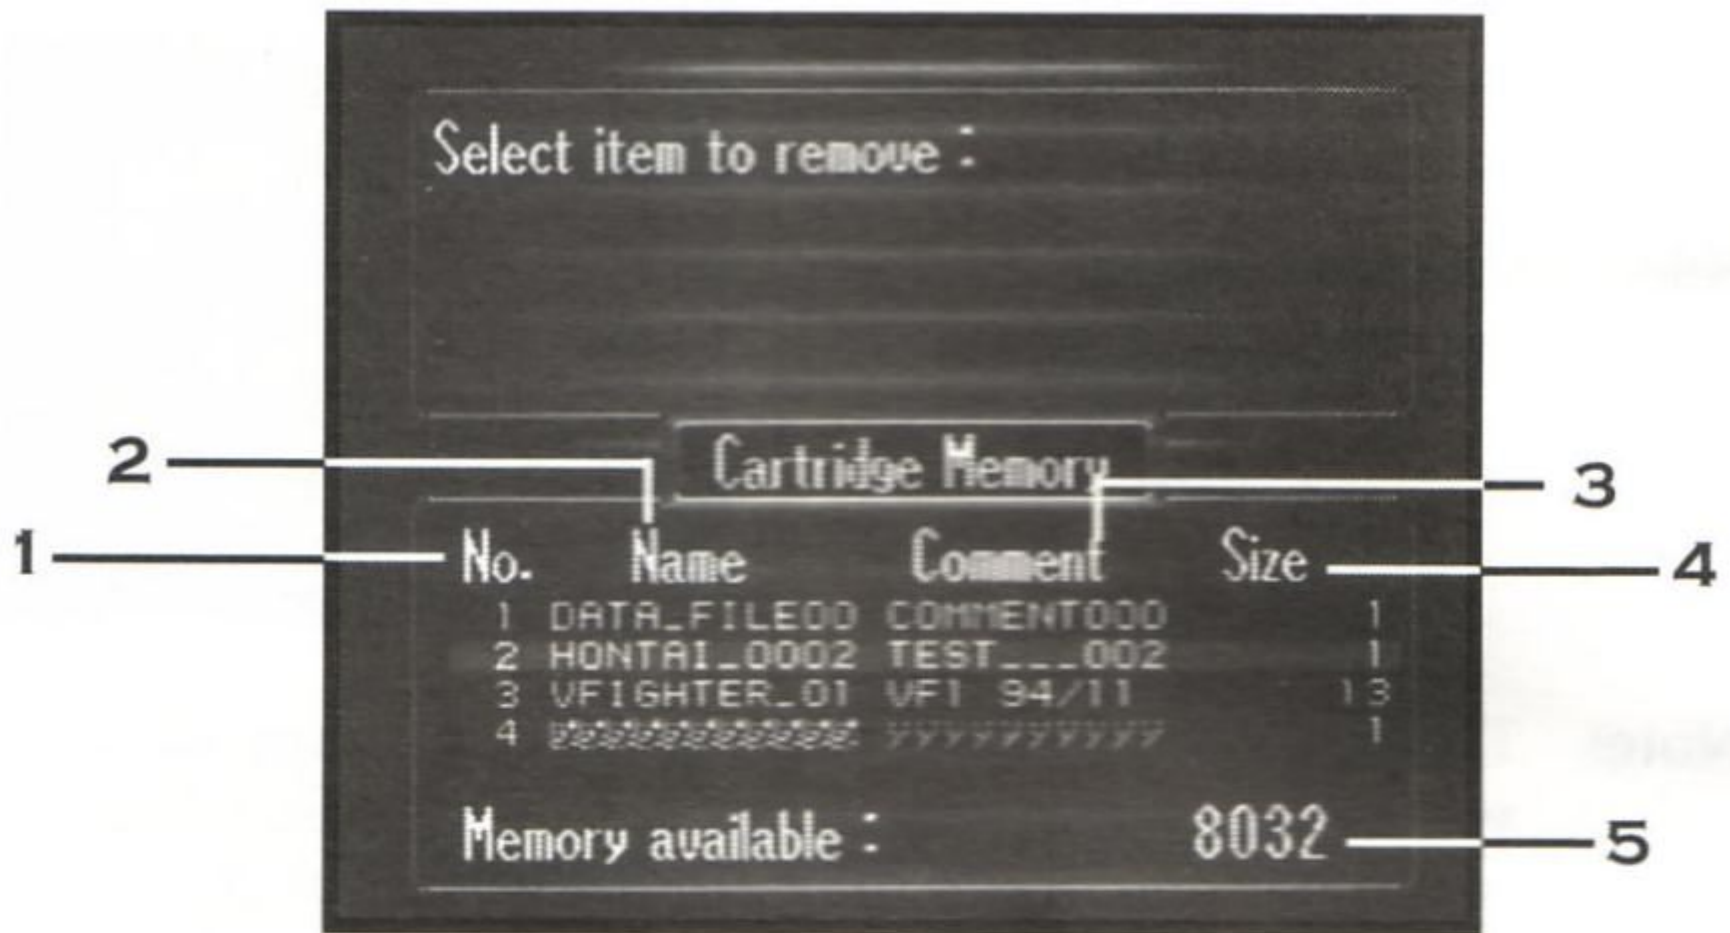


1. Item number—D-Button up or down to scan saved items
2. Item name—automatically assigned
3. Comment—supplement to the item name
4. Item size—varies from game to game
5. Remaining Memory—how much memory is available

Initializing

Initializing allows you to use the Back-Up Memory. The first time you use your unit, it is necessary to initialize. You can also initialize as a means of clearing all saved data or when you are unable to load data.

  1. Go to the Memory Manager screen.
2. Select **Cartridge Memory:** Clear and press Button A or C.

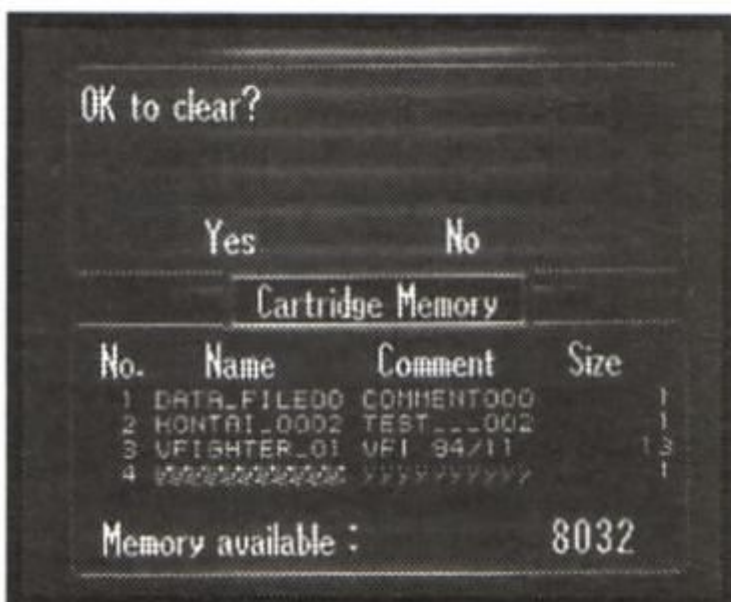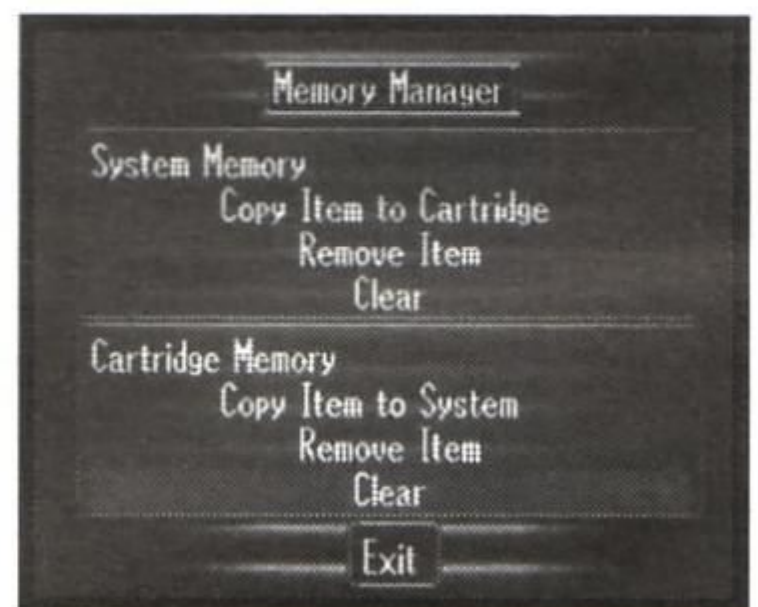


3. If you select **Yes** and press Button A or C, all the data in the Back-Up Memory will be erased. If you select **No** and press Button A or C, you return to the Memory Manager screen without losing any data.

Note: If the message **Not Cleared!** appears, there is a fault with your Back-Up Memory. Consult your Sega dealer for further assistance.

Deleting Selected Data

You can delete items that you no longer need or that you cannot load from the Back-Up Memory. (This option is not available if you have no data saved.)

 
1. Go to the Memory Manager screen.
2. Select **Cartridge Memory: Remove Item** and press Button A or C. The Delete screen appears.

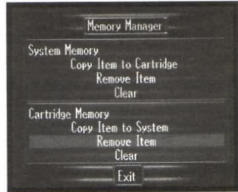

3. The items you have saved are shown. Highlight the item you wish to delete and press Button A or C.



 4. Select **Yes** and press Button A or C. The item will automatically be erased and you return to the previous screen. If you select **No** and press Button A or C, you return to the previous screen with your data intact.

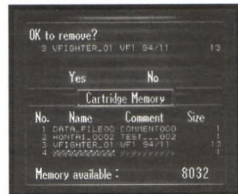





5. When you are through, press Button B to return to the Memory Manager screen.

Note: If the message **Not Removed!** appears, there is a fault with your Back-Up Memory. Consult your Sega dealer for further assistance.

Copying Items

You can copy items from the internal memory of your Sega Saturn to the Back-Up Memory.

    1. Open the Memory Manager screen.
2. Select **System Memory: Copy Item to Cartridge**, and press Button A or C. The Copy screen appears.
3. The files you have currently saved are shown. Highlight the file you wish to copy. Press Button A or C. To view data saved on the Back-Up Memory, press the Left or Right Shift button.
4. If there is no item with the same name already loaded in the Back-Up Memory, select **Yes** and press Button A or C. Select **No** and press Button A or C and you return to the Copy screen with no data transfer made. If there is an item with the same name already loaded in the Back-Up Memory, select **Yes** and the new item will overwrite the existing one. (The original will be deleted.) Select **No** and press Button A or C and you return to the Copy screen with no data transfer made.
5. When you are through, press Button B to return to the Memory Manager screen.

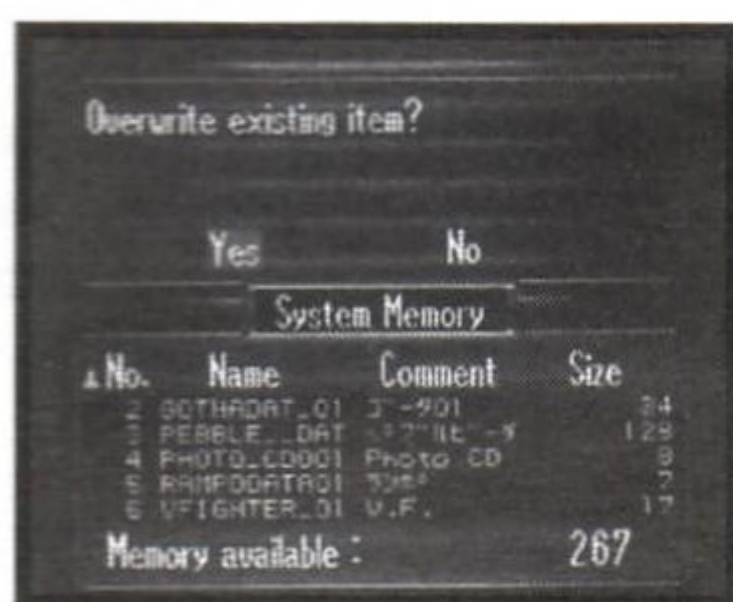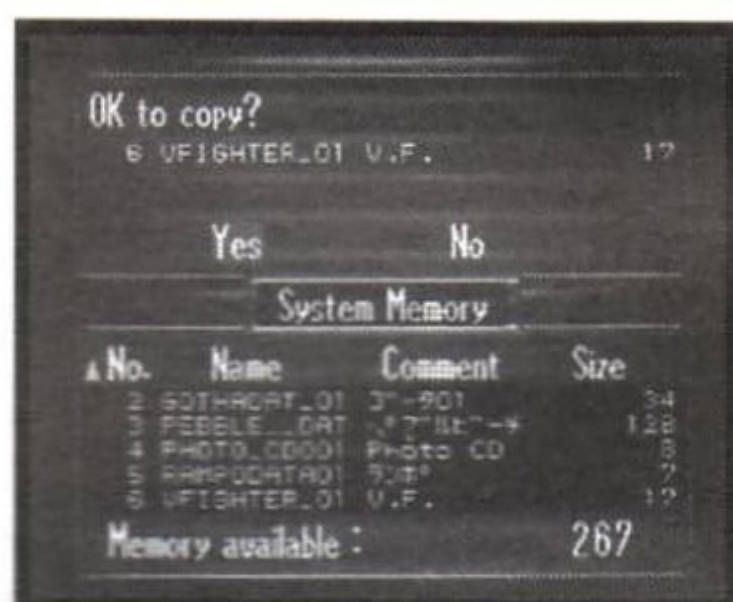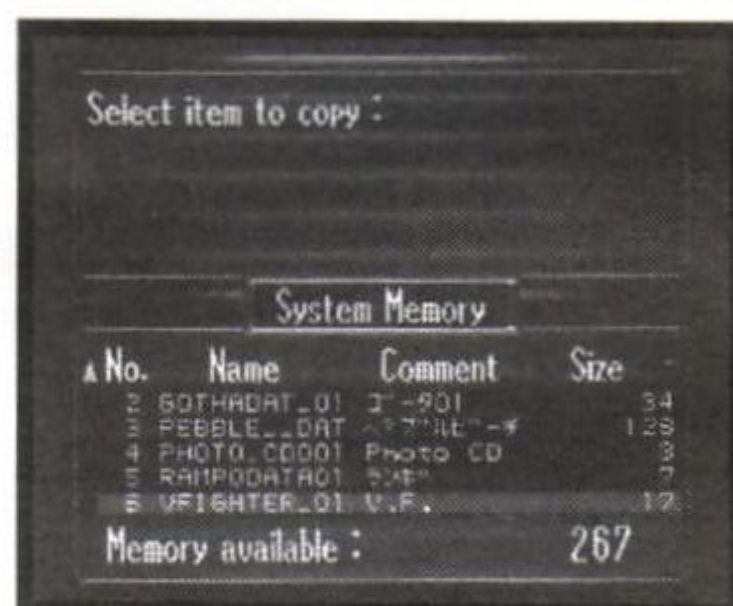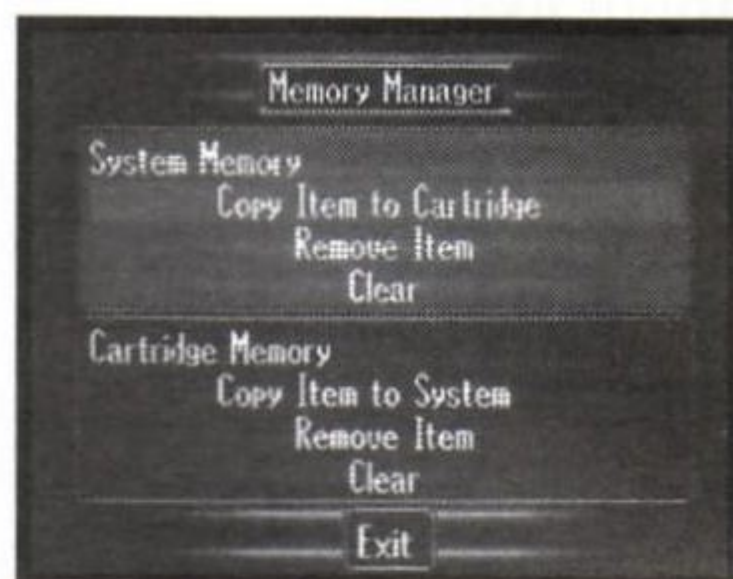

Caution

While initializing, deleting or copying, do not switch off the power. Doing so damages the data in your internal backup memory, and you will need to remove the data or initialize the internal memory. The Reset button is disabled during these operations.

Starting a Game

Use the following steps to begin a game after initializing, deleting or copying.

1. At the Memory Manager screen, select **Exit** and press Button A or C. The System Settings screen appears. Select **Exit**, and press Button A or C again. The Audio CD Control screen appears.
2. Insert a Sega Saturn game disc and continue as usual. For further information, consult the Sega Saturn and game instruction manuals.



Removing the Back-Up Memory

Be sure to turn the power to the Sega Saturn off before removing the Back-Up Memory. If you do not, it may damage the cartridge and Sega Saturn console.



Troubleshooting

 
- *The Memory Manager screen does not show the Back-Up Memory window.*

Turn off the power to the Sega Saturn and remove the Back-Up Memory. Reset it in the cartridge slot. If the Back-Up Memory window still does not appear, consult your Sega dealer.

- *The messages Not Cleared!, Not Removed! or Not Copied! keep appearing.*

There is a fault with your unit. Consult your Sega dealer.

Memo

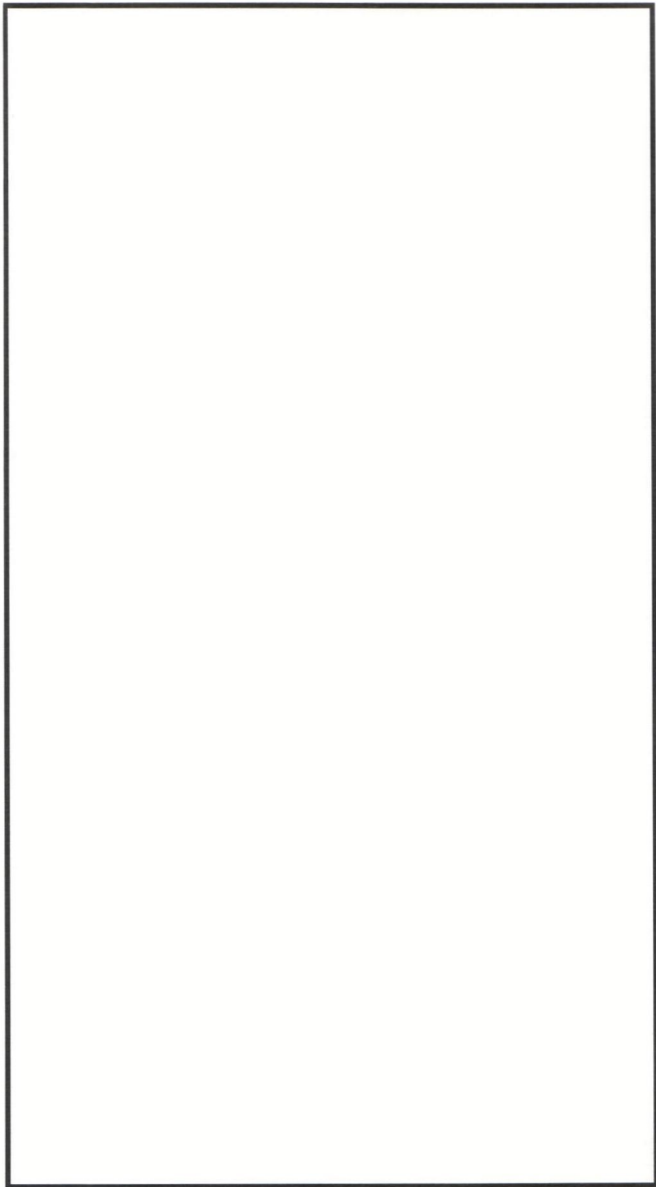

SEGA™

Sega, Sega Saturn and Back up are trademarks of SEGA.

© SEGA Enterprises, Ltd. 1995

<672-2439A>