



DIGA MART

DISTRIBUTED IN NORTH AMERICA EXCLUSIVELY BY THE



SEGA®



DIGA MART

DESCRIPTION

One to four players.

●
Prizes of various items such as candy, small toys, etc.

●
Prizes placed on turntable.

●
Game played to music (3 tunes selectable by dip switch).

●
"Starter" merchandise package available.

How-To-Play

Insert coin - play lamp lights.



Press the swing button to move the crane to the turntable.
When the button is released the crane movement stops.

Press the catch button and the crane's three claw-fingers open
and moves downward to try and pick up a prize.

When a prize is secured, the crane moves to the
prize-out slot and deposits it.

Play time is 80 seconds.

Specifications

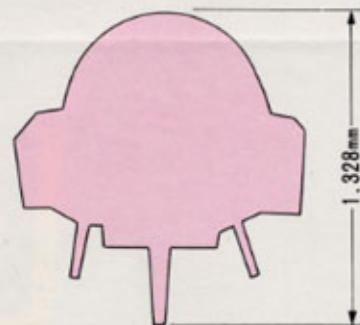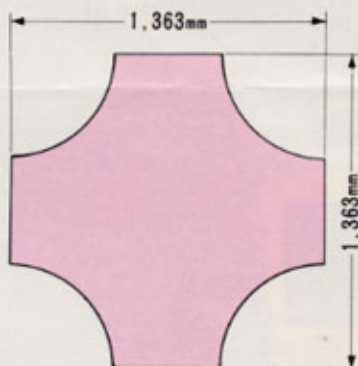

Power : 110V/80W/50-60 Hz Weight : 141 kg.

● 824-9994

Area Code 717

● 333 NORTH PENNSYLVANIA AVENUE ● WILKES-BARRE, PENNSYLVANIA 18702

Cable: "RONOCO"

