

# Instructions for Saturn™ Memory Card

With the power to the Saturn **OFF**, plug the Memory Card Plus into the cartridge slot. Each Memory Card has 8 Megabits\* of game storage memory. To save a game, follow the game's instructions on how to save. All games save differently, so consult the game manual for specific instructions. This memory card can be edited from the **Memory Manager** screen, allowing you to move, copy, and erase files.

## **Navigating the Memory Manager**

When you switch on your Saturn with the Memory Card Plus inserted you will be presented with the CD Control screen. To use the Memory Card Plus select the **Manage Memory** option from this screen. If you wish to play a CD game then select the top left option from the CD Control screen "**Start Application**" to go straight to the game.

## **Copying Game Saves**

To copy a saved item from the system memory to the cartridge, select the **Copy Item to Cartridge** option and press the "A" or "C" button on the control pad. Highlight the game save you wish to copy and press either the "A" or "C" button on the control pad. If there is not a game save on the cartridge with same name, select "YES" and press either the "A" or "C" button to copy the game save to the cartridge. If you select "NO" and press either the "A" or "C" button you will be returned to the previous menu. To copy a game save from the cartridge to the system memory select the **Copy Item to System** option. If there is a game save with the same name on the cartridge, you can either overwrite it, or cancel. Select "YES" and press either the "A" or "C" button to overwrite the game save on the cartridge. Select "NO" and press either the "A" or "C" button to cancel and return to the previous menu. Press the "B" button when you are finished to return to the Memory Manager Screen.

## **Deleting Game Saves**

To delete game saves from the cartridge, select the **Remove Item** option and press either the "A" or "C" button. Highlight the game save you wish to delete, and press either the "A" or "C" button on the control pad. Select "YES" and press either the "A" or "C" button to delete the game save. Select "NO" if you do not wish to delete the game save, and you will be returned to the previous menu. Press the "B" button when you are finished.

## **Warning**

Do **not** turn the system power OFF while initializing, copying, or deleting. Doing so will damage your internal memory backup, and you will need to initialize the internal memory or remove the data.

## **Trouble Shooting**

Make sure the Memory Card Plus is plugged securely into the cartridge slot. Also make sure that the game you are trying to save is a game that supports the **Game Save Option**. Not all games support this option, so check the game's manual to find out if it does.

If you are having problems with the Memory Card, you can call our Technical Support department at (410) 238-2424 (9:00 am - 8:00pm EST week days)

\* 4 Megabits, which, through the use of advanced compression technology, provides a virtual 8 megabits of storage capacity.