


SEGA SERVICE

Field Service Bulletin Strike Fighter Deluxe Important Notice !!!

Problem: The Joystick used for the direction control (Camera Angle) on the Strike Fighter Deluxe is threaded and may come loose.

Solution: See the pictures below and install Blue Loctite (242) on the locations indicated ASAP.

Apply Loctite at these points

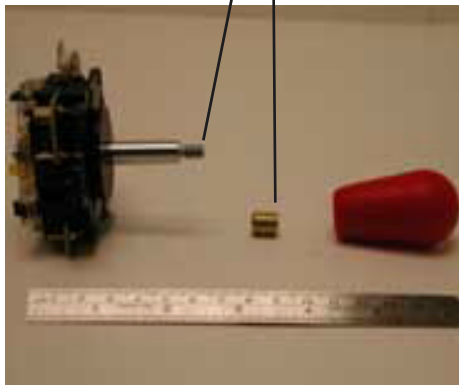

Assembled Joystick