



**Problem**

Can not boot up (No green light)

**Solution**

Press the power switch on side of the LCD Monitor.  
Check AC110V plug and Power adaptor in under the monitor.

★ If same problem occur, Need change LCD Monitor.



**Problem**

"NO MEDIA DETECTED" on the display

**Solution**

Please completely insert the compact flash into under the monitor.

★ If same problem occur, Need to change LCD Monitor or compact flash.




**Problem**

"NO SIGNAL" on the display

**Solution**

Press —button on the monitor once then Media player will display.

★ If same problem occur, Need to change LCD Monitor or compact flash.

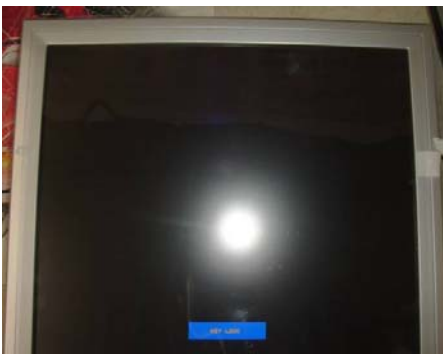

**Problem**

"KEY LOCK" on the display

**Solution**

Press power button and then press ▼ button together to unlock the keys.

★ If same problem occur, Need change LCD Monitor.



**Problem**

Bad picture on the display ,contrast or brightness or color may need adjustment.

**Solution**

Press ▲ button go to setting mode and adjust each category using + and —button on the monitor

★ If same problem occur, Need change LCD Monitor.

