

To whom it may concern

March, 6, 2007

SEGAAMUSEMENTS U.S.A. Inc.

RE: DISTRIBUTION OF INITIAL D3 SOFTWARE (VERSION B) FOR CYCRAFT GAME

Upon the confirmation of necessary modification on game specification of "INITIAL D3 – English Version for CYCRAFT", we enclosed herein a new version software for bug fixing update together with its overwrite procedure instruction.

This is distributed FREE OF CHARGE to the operator/owner of subject title.

Upon completion of the update procedure, retain the enclosed software for possible future use,

If you have any question, please feel free to contact the inquiry shown below.

We apologize in advance for any inconvenience this may cause and appreciate your kind co-operation on this matter.

We will continue our effort for future improvement of customer satisfaction and our product quality.

We look forward to your continuous patronage.

Thank you

WHAT IS MODIFIED?

Version B includes bug fix that freezing issue with certain pattern of steering during advertising mode.

Please ask any question at:

 
Kiyo / Don Campbell (Tech. of SEGA AMUSEMENTS U.S.A. Inc. (Phone: 1-847-364-9787)

STOP

IMPORTANT

Handling the GD-ROM Disk


- Do not contaminate the disks with your fingerprints or dust particles. Contaminated disks may lower audio and video quality.
- When cleaning the disks, do not use volatile chemicals (benzine, thinner, etc.), cleaning sprays, and antistatic agents.
- Do not use cracked, warped, or damaged disks.
- Do not attach papers or seals onto the disks; do not scratch the disks.
- Do not use the disks with a sign of pecked seals, tapes, etc.
- Observing these instructions, do not insert such a non-usable disk into the GD-ROM drive. Otherwise the inserted disk can not be ejected.
- When cleaning a heavily contaminated disk, use clean cloth that has been soaked in water and squeezed. Then remove moisture with dry cloth.
- When holding a disk, be careful not to contaminate it with your fingerprints.

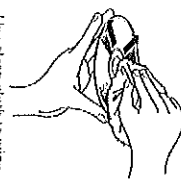

Use clean cloth to wipe the disk gently into a radial direction.

How to Hold a Disk

 With both hands:
Put your thumbs and forefingers of both hands on the disk's 4 edges.

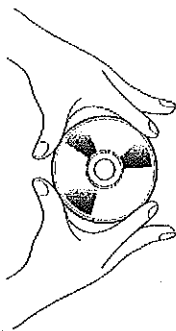

With one hand:
Insert your forefinger into a central hole and at the same time put your thumb and middle finger on the disk's 2 edges.



How to Attach

- ① Remove the 1 truss head screw that fixes the GD-ROM drive lid (DISC LID). And turn clockwise the lid to remove.
- ② Take out the GD-ROM disc from its case, and set it onto the GD-ROM drive with a labeled side facing you.
- ③ Return the lid to its original place, and fix it with 1 truss head screw. Be careful not to fasten it too tightly.

How to Detach

- ① Remove the 1 truss head screw that fixes the GD-ROM drive lid (DISC LID). And turn clockwise the lid to remove.
- ② Take out the GD-ROM disc and store it in the case. In this instance, be careful not to touch its grooves where the data is stored.
- ③ Return the lid to its original place, and fix it with 1 truss head screw. Be careful not to fasten it too tightly.

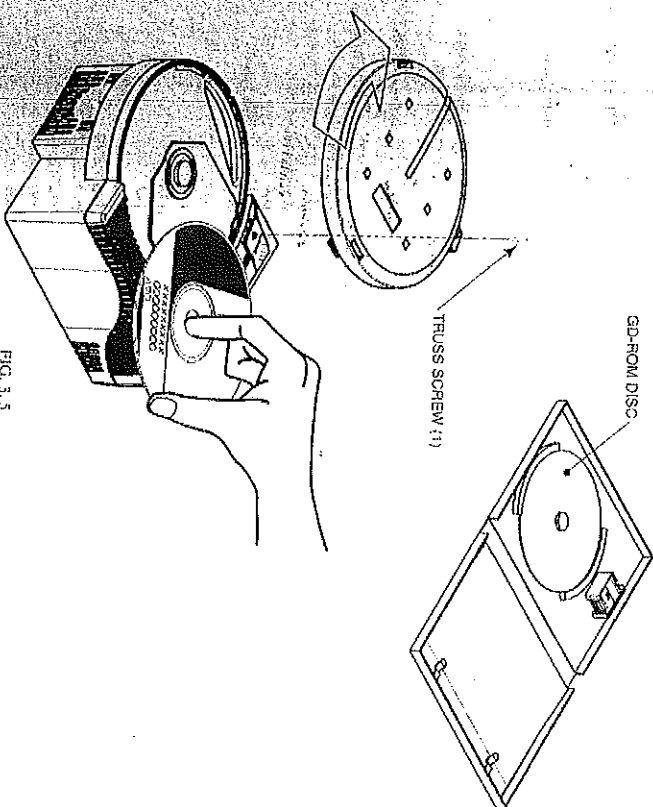 


FIG. 3.5