

SEGA



NICKELODEON

SpongeBob
SquarePants

Ticket Boom

SUITABLE
FOR
ALL AGES

Stomp the light to Win Tickets!!

How to Play

1. Stand on the "STOP" button and insert coin(s).
2. The light will move towards you. When the light reaches the "STOP" button, "Jump and stomp the light".
3. You will win ticket(s) when you succeed in stopping the light at "STOP" button.
4. Get ready for the next round. The light will move faster!!
5. To get the "Jackpot Challenge" you will have to win 5 consecutive rounds.


Specification

Size: (H)93' x (W)53' x(D)87'

Weight: 215kg

Power, maximum current:
220W, 2.8A

Specification subject to change without notice.

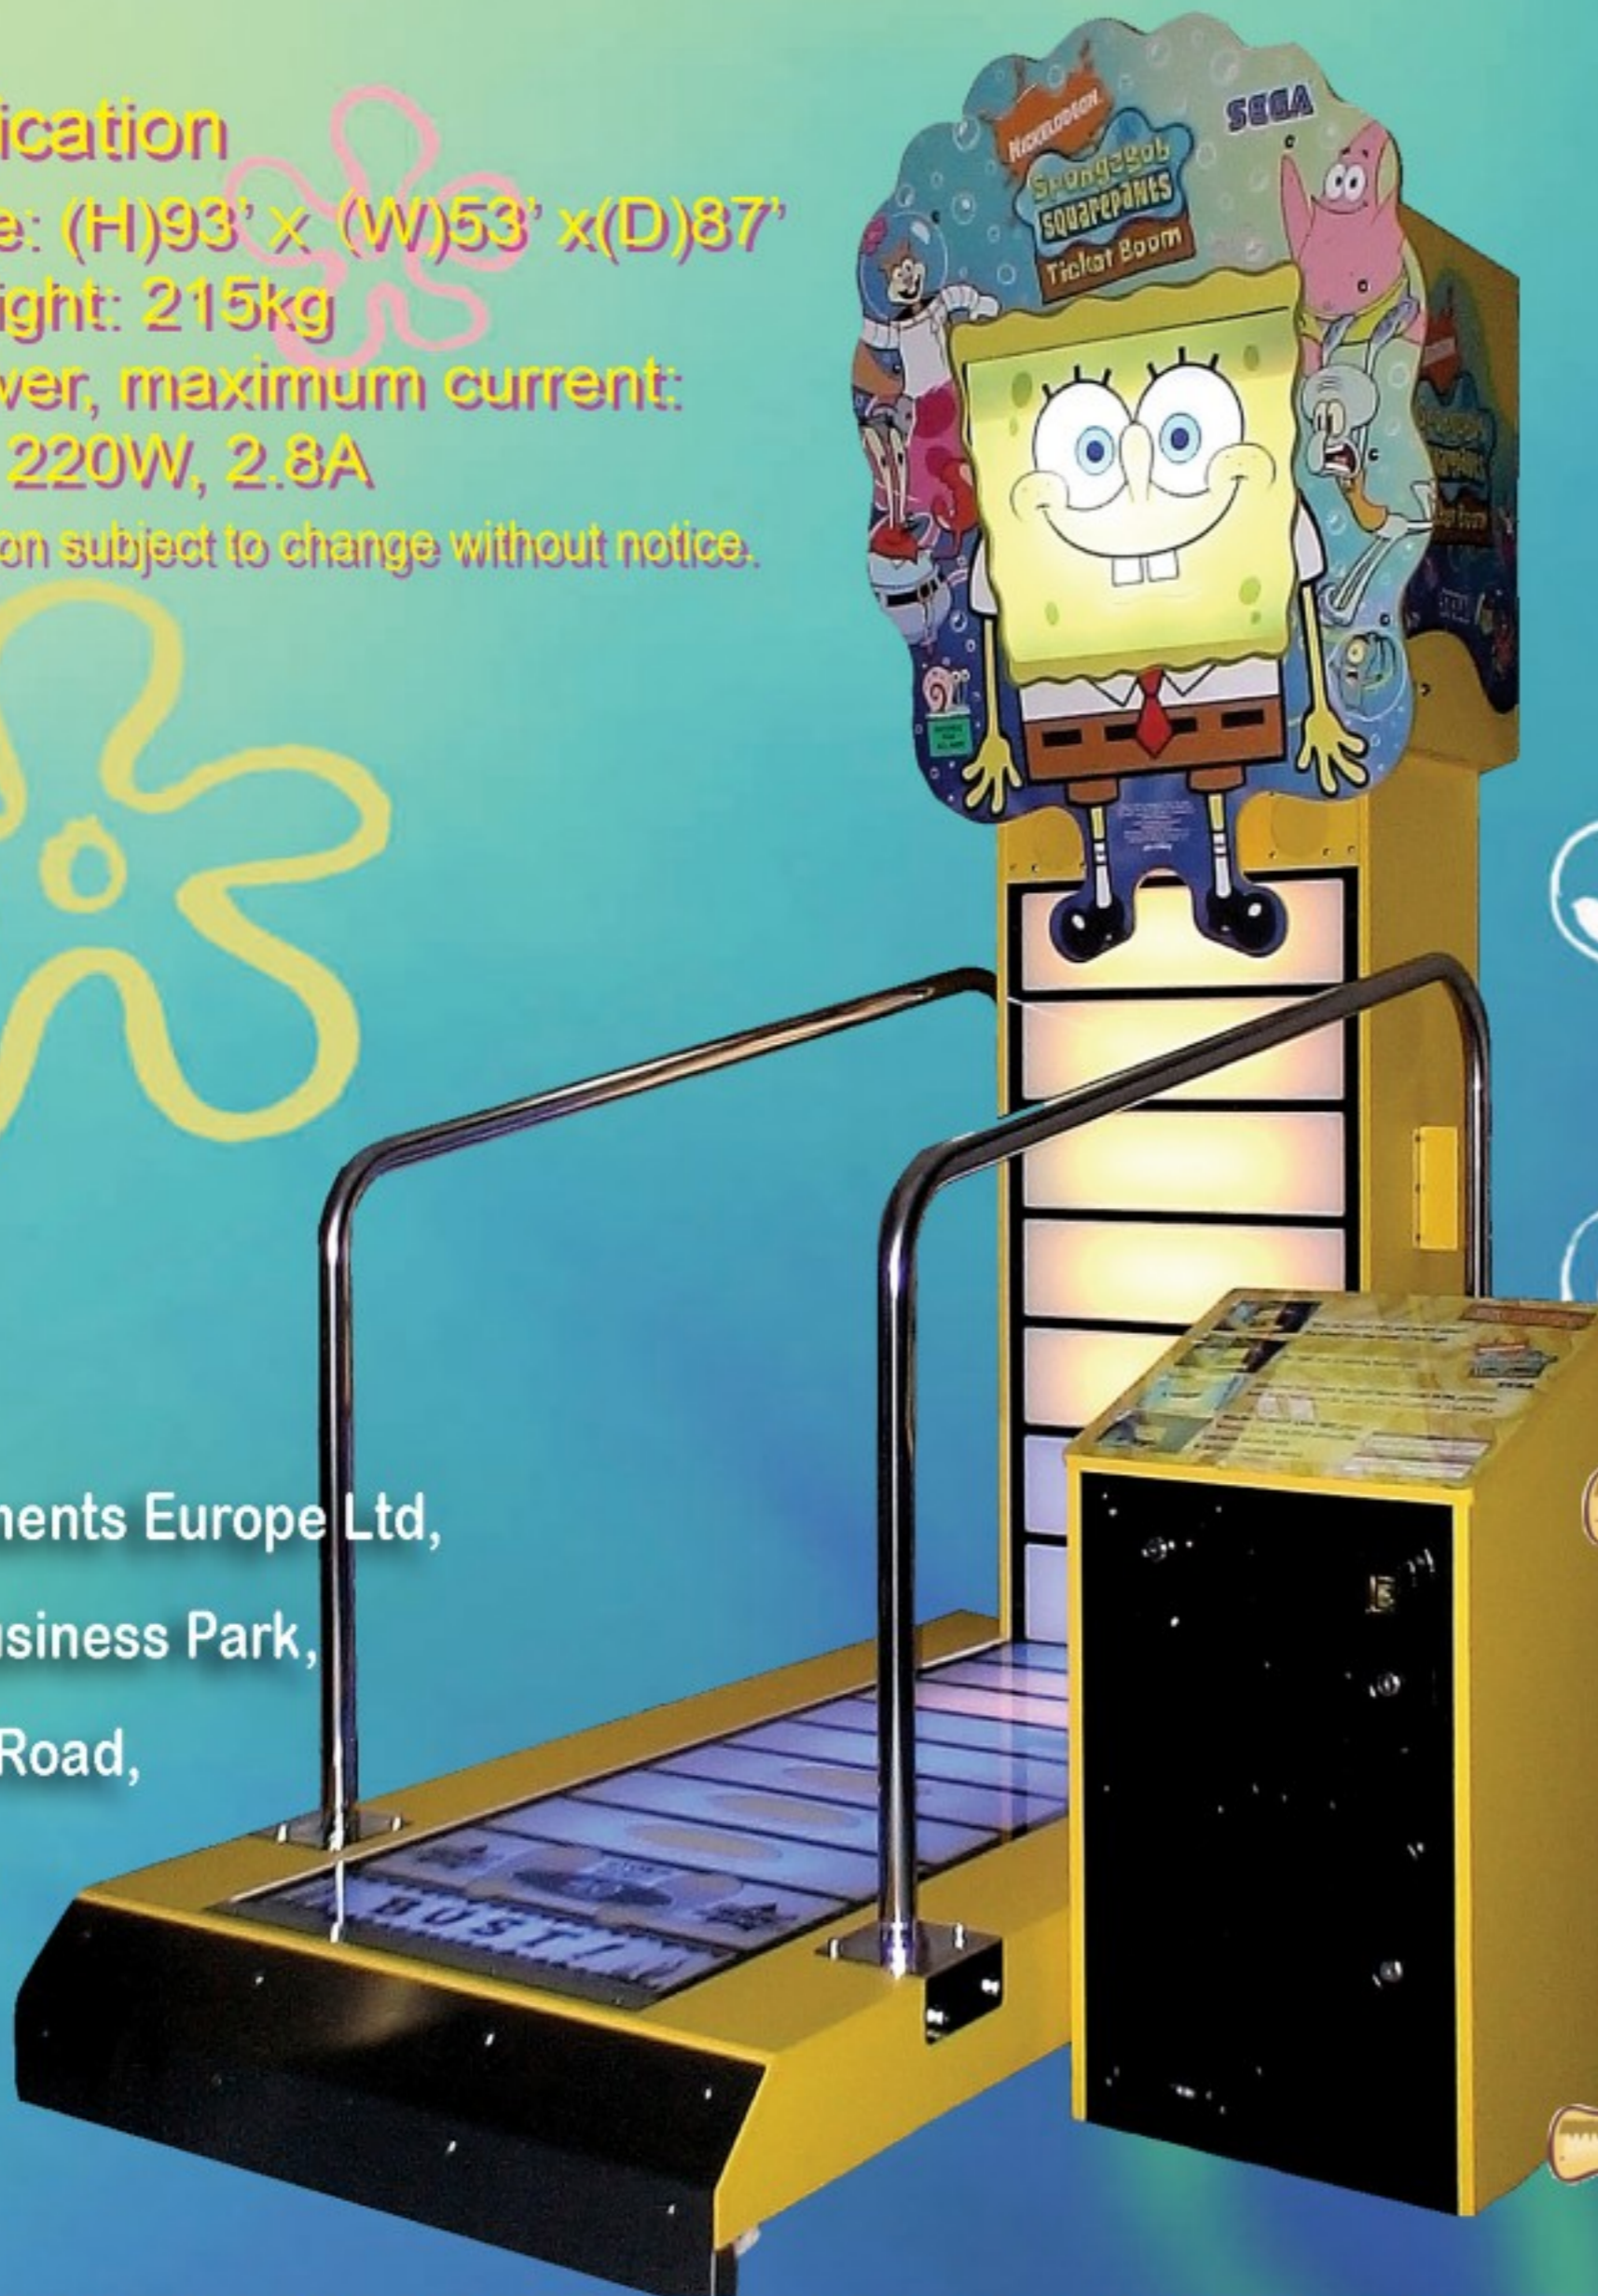

©SEGA. SEGA is registered in the U.S. Patent and Trademark Office. SEGA and the SEGA logo are either registered trademarks or trademarks of SEGA Corporation.

© 2008 Viacom International Inc. All Rights Reserved.

Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.

Stephen Hillenburg

Sega Amusements Europe Ltd,
42 Barwell Business Park,
Leatherhead Road,
Chessington,
Surrey, UK
KT9 2NY

TEL+44 (0) 208 391 8090 FAX: +44 (0) 208 391 8099 WEB: WWW.SEGA-AMUSEMENTS.CO.UK