

CONNECTING YOUR INTERACTOR TO THE SONY PLAYSTATION

CONNECTION TO T.V. VIA RF CONVERTOR

LAY "W" ADAPTOR LEAD "A" ON FLAT SURFACE AS DIAGRAM.


CONNECT PLUG "F" TO AUDIO OUT "R" ON PLAYSTATION.

CONNECT PLUG "C" TO SOCKET "E" ON "W" ADAPTOR (LEAD "A").

CONNECT LEAD "B" TO SOCKET "G" ON "W" ADAPTOR (LEAD "A").

CONNECT OTHER END OF LEAD "B" TO SOURCE SOCKET ON INTERACTOR AMPLIFIER.

INSTALLATION IS NOW COMPLETE.

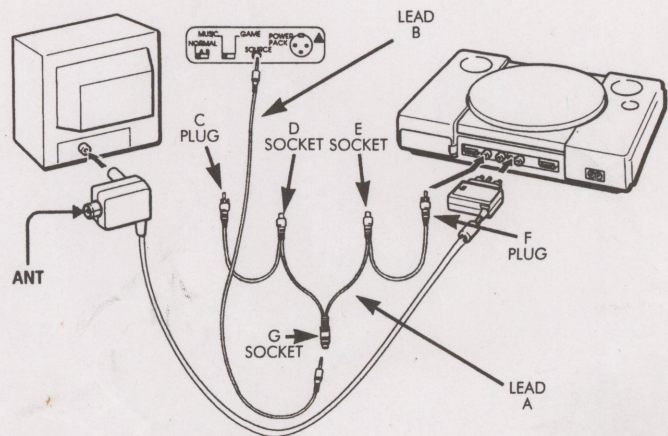

CONNECTION TO T.V. VIA SCART LEAD


LAY "W" ADAPTOR LEAD "A" ON FLAT SURFACE AS ABOVE.

CONNECT PLUG "C" TO AUDIO OUT "R" AND PLUG "F" TO AUDIO OUT "L" ON PLAYSTATION

CONNECT LEAD "B" TO SOCKET "G" ON "W" ADAPTOR (LEAD "A")

CONNECT OTHER END OF LEAD "B" TO SOURCE SOCKET ON INTERACTOR AMPLIFIER


INSTALLATION IS NOW COMPLETE.

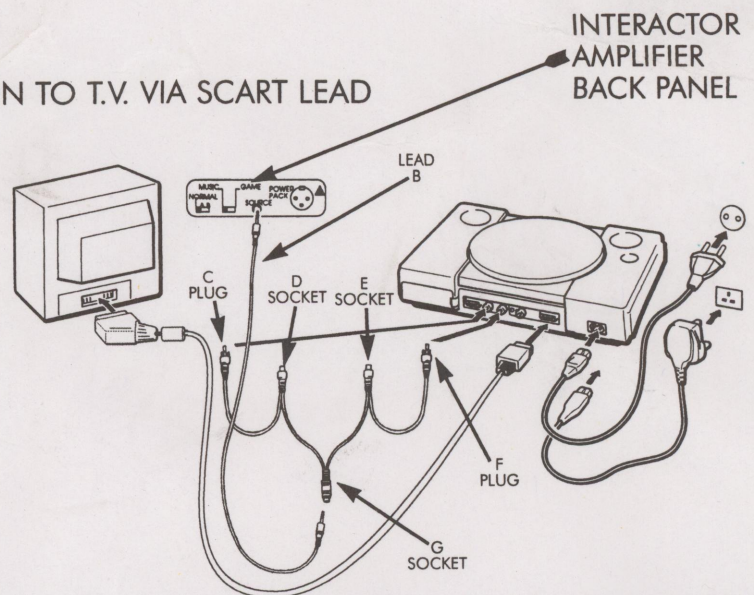

CONNECTING YOUR INTERACTOR TO THE SEGA SATURN

CONNECTING TO A T.V. WITH SCART INPUT

AFTER OBTAINING YOUR INTERACTOR SCART ADAPTOR, CONNECT ONE END OF LEAD "B" TO SOCKET PROVIDED ON ADAPTOR LEAD AND CONNECT OTHER END OF LEAD "B" TO SOURCE SOCKET ON YOUR INTERACTOR AMPLIFIER.

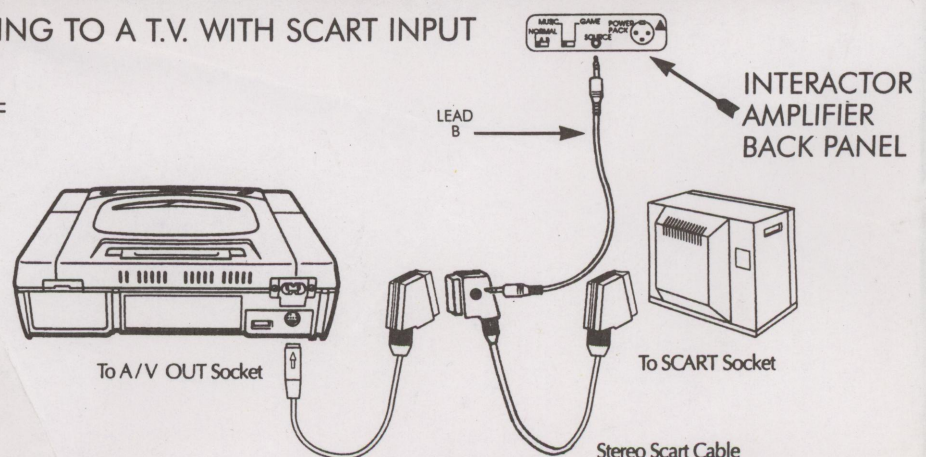

**INTERACTOR SCART ADAPTOR AVAILABLE AS AN ACCESSORY FREE OF CHARGE
PLEASE CONTACT AURA HELPLINE ON 0117 9490902**